




Cheese Mill

Tool Instructions

Care and Cleaning

While the entire Cheese Mill is **dishwasher safe**, it is recommended to disassemble the parts to effectively clean all components.


1. Remove Top from Cheese Mill. Rinse Cheese Mill to remove any leftover cheese from unit.
2. Hold the Cheese Mill with the blade facing upward. Squeeze the two tabs on the sides of the Body with one hand. With the other hand, turn the Locking Ring counter-clockwise until it is free from the Cheese Mill.
3. Remove the blade using extreme caution (blades are sharp).
4. Remove the Insert from the Body. The parts are ready for cleaning.

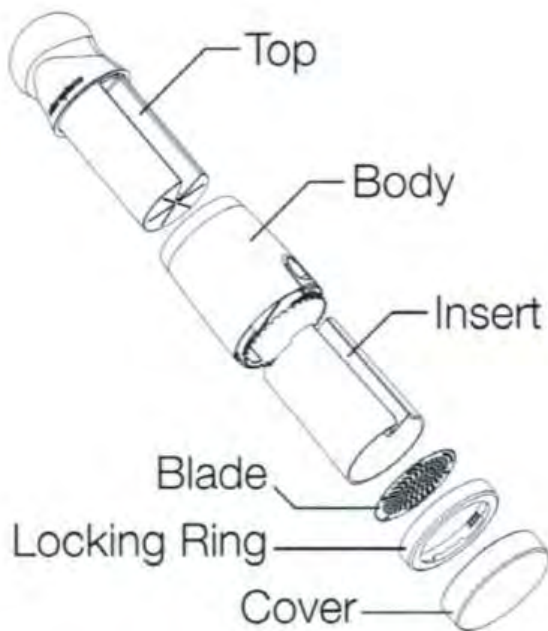

Assembly Process: Put Insert into Body and install Blade. The text “Face In” should face into the Insert. Twist the Locking Ring back onto the Body until you hear 3 clicks.

Operation

1. Remove the Top from Cheese Mill.
2. Cut pieces of food that will easily fit into the Mill.
3. Place food into Mill.
4. Insert the Top.
5. While gently applying downward pressure, rotate the Top in a clockwise direction to grate food.

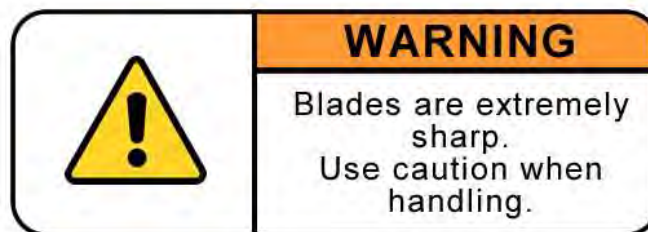

Please contact us if you need more information.
Microplane Customer Service
1-800-555-2767
kitcheninfo@microplane.com