



ROTARY GRATER INSTRUCTION

Model: #39304, #39904


DISASSEMBLY:

1. Remove crank arm by turning it counterclockwise while holding the plastic edge of the drum
2. Drum, crank arm and grater body will come apart in 3 pieces
3. Clean in dishwasher or by hand



ASSEMBLY:

1. Put drum into the grater body
2. Hold drum and turn crank arm clockwise to screw into housing

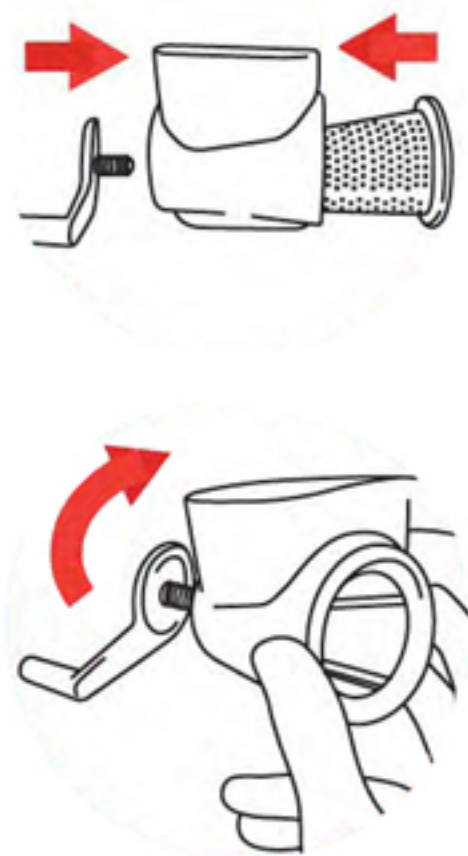

USE:

1. Fill chamber with hard cheese, nuts, chocolate or coconut.
2. Squeeze grater body handle
3. Turn crank arm

