



Rotary Shaper Replacement

Tool instructions

You will need:

Safety Goggles

Gloves

Rotary Blade (Package contents)

Instructions



1. Grip the drum firmly and unscrew the cap clockwise approximately two rotations. Note the arrows on top of the cap.


2. Remove and discard old blade. NEVER use a Microplane Rotary Shaper with a damaged spindle or blade.

3. Fit the tabs of the new blade into the location slots at bottom of spindle making sure the tabs are fully seated.

4. Place the top cap onto the spindle and grip the blade and spindle bottom firmly. Use downward pressure to keep the blade tabs seated. Reinstall top cap by tightening in a counter-clockwise direction. S

Important Notes:

- The Rotary Shaper rotates clockwise. Materials being fed into the shaper should be fed left of center to reduce kickback.
- Do not use with a damaged spindle or blade.
- Recommended speed is 1000-2000 RPM. Maximum: 2500 RPM
- Keep hands and fingers clear of blade while in use.
- Feed work slowly with light pressure until you become accustomed to the effectiveness of your rotary shaper.

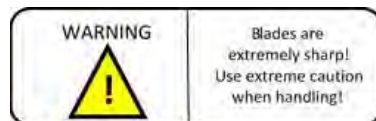

Please contact us if you need more information.

Microplane Customer Service

1-800-555-2767

kitcheninfo@microplane.com